MAXTEK

User Guide

Bluetooth Indoor/Outdoor Speaker

Now you have purchased a MAXTEK® product you can rest assured in the knowledge that as well as your 3 year parts and labour warranty, you also have the peace of mind of a dedicated helpline and online support

AFTER SALES SUPPORT

GB **01270 508538** IRE **1800 995 036**

www.quesh.co.uk

MODEL NUMBER: 59033

- Bluetooth Speaker
- Mains Adaptor
- Line-In Cable

3 YEARS WARRANTY

Contents

1. Welcome Section

2. General Information & Safety Instructions

3. Contents & Features

4. Controls

4. Instructions

5. AUX Mode

5. Battery Installation

6. Technical Specifications

7. Trouble Shooting

AFTER SALES SUPPORT

GB **01270 508538** IRE **1800 995 036**

www.quesh.co.uk

MODEL NUMBER: 59033

- Bluetooth Speaker
- Mains Adaptor
- Line-In Cable

3 YEARS WARRANTY

Welcome Section

Congratulations!

You have made an excellent choice with the purchase of this quality MAXTEK® product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and saftey, supported by the high quality standards of Quesh.

We want you to be completly satisfied with your purchase so this MAXTEK® product is backed by a comprehensive manufacturer's 3 year warranty and outstanding after sales service through our dedicated helpline.

We hope you enjoy using this product for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty, please telephone our helpline for immediate assistance. Faulty product claims made within the 3 year warranty period will be repaired or replaced free of charge provided that you have a satisfactory proof of purchase (keep you receipt safe).
This does not affect your statutory rights. How ever be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused and/or disassembled.

AFTER SALES SUPPORT

☎ (GB) **01270 508538** (IRE) **1800 995 036**

www.quesh.co.uk

MODEL NUMBER: 59033

- Bluetooth Speaker
- Mains Adaptor
- Line-In Cable

3 YEARS WARRANTY

General information & Safety Instructions

This Wireless Speaker is powered by 6 x ‘C’ batteries.

Do not dispose of batteries in your household waste.

Please contact your local authority for details on safe disposal.

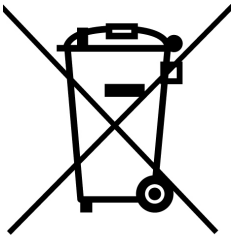

- Never throw batteries into a fire or expose to excessive heat sources.
- If batteries are swallowed, please seek immediate medical attention.
- Always ensure correct +/- battery polarity when installing batteries.
- Do not recharge non-rechargeable batteries.

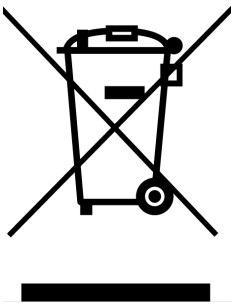

Electrical and electronic equipment (WEEE) contains materials, parts and substances, which can be dangerous to the environment and harmful to human health if the waste of electrical and electronic equipment (WEEE) is not disposed fo correctly.

Equipment, which is marked with the WEEE logo (as shown on the left), should not be thrown away with your household waste. Contact your Local Authority Waste Disposal Department, as they will be able to provide details of the recycling options available in your area.

AFTER SALES SUPPORT

GB **01270 508538** IRE **1800 995 036**

www.quesh.co.uk

MODEL NUMBER: 59033

- Bluetooth Speaker
- Mains Adaptor
- Line-In Cable

3 YEARS WARRANTY

Contents & Features

Contents

1 x Bluetooth speaker
1 x 3.5 to 3.5mm Line-In cable
1 x 9v Mains Adaptor
1 x User manual

Features

- Bluetooth 3.0 Platform
- Operating distance up to 10 metres / 33 feet (open area)
- Powered by 6 x C alkaline batteries (not included)
- 1.5m, 9v, two core, mains adaptor (included)
- IPX 3 showerproof feature
- 3.5mm line-In cable
- 3.5mm line-In port
- Keyhole wall mount slots

Please note:
If the product is to be used with the mains adaptor outdoors, the mains adaptor must be plugged into the mains supply indoors, not outdoors or in damp or wet conditions.

Controls

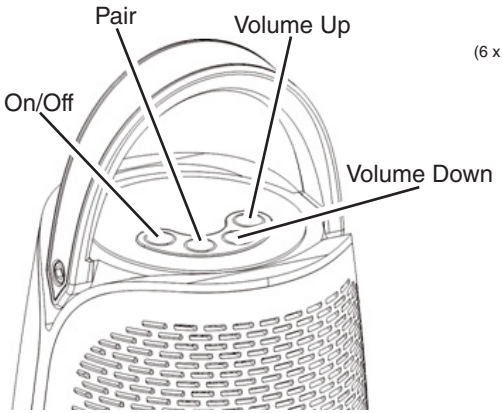

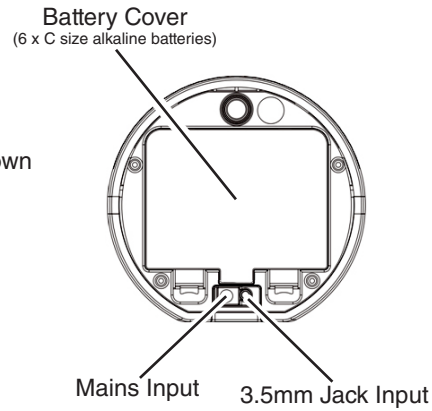

Instructions

Pairing the speaker

1. Connect the mains power using the adaptor supplied or insert 6 x C batteries (not included).

2. Press the power button for 3 seconds to turn the speaker on, the Blue LED light will flash slowly.

3. Enable your Bluetooth device such as cell phones, tablets or other Bluetooth media, and make sure it is in searching mode.

4. The Bluetooth speaker will automatically search and pair your Bluetooth device.

5. If no auto pairing connection is made, press and hold the 'Pair' button for 5 seconds until the blue LED flash quickly.

6. Select "MAXTEK AUDIO" in the list shown in the Bluetooth device.

7. Enter "0000" if password is required.

8. When Bluetooth connection is made, the blue LED will become solid.

AUX Mode

1. To use the auxiliary line in, first connect the AUX cable to the speaker and device you want to play audio from.

2. Press the 'ON/OFF' to change the speaker from bluetooth mode (indicated by a blue LED), to AUX mode (indicated by a green LED).

3. Enjoy your music.

Battery Installation

1. Turn the speaker over; on the bottom of the speaker you will see the battery door.

2. Open the battery door by pinching the two tabs and pulling towards you.

3. Install 6 (six) C size batteries following the battery markings (+/-) inside the compartment.

4. Close the battery door until the door snaps shut.

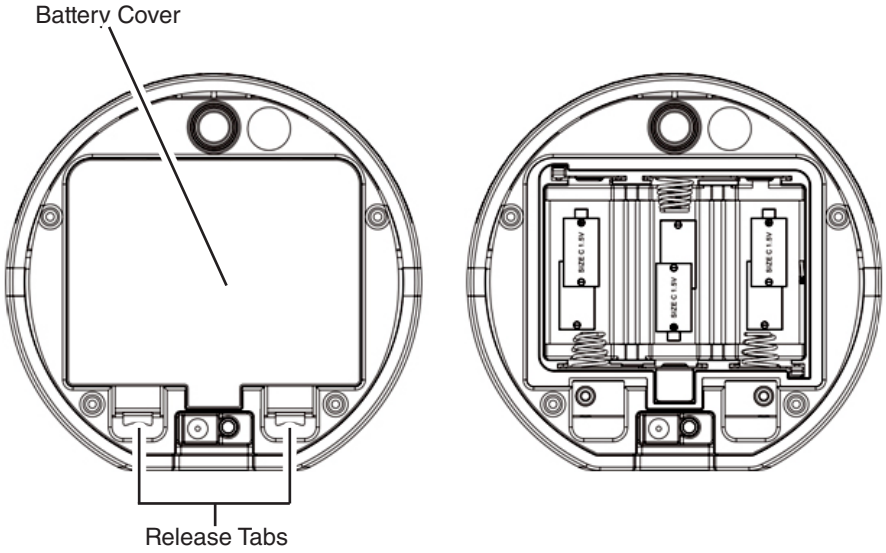

Technical Specifications

Carrier Frequency	: Bluetooth 3.0
Power Requirements	: By 6x C size alkaline batteries (not-included) Or power adaptor (supplied)
Frequency Response	: 30Hz – 18KHz
Distortion	: <0.5%
S/N Ratio	: 65dB (typical)
Channel Separation	: 50dB (typical)
Operation Distance	: Up to 10 metres / 33 feet (open area)
Output Power	: 5W (Max)

NOTES: This speaker is in compliance with the specified Bluetooth version. It does not guarantee compatibility of all functions on every Bluetooth enabled device. Please check with your mobile phone's user manual for compatibility and functionality.

Trouble Shooting

NO SOUND

- The speaker's battery charge is too low. Replace with new/recharged batteries.
- Ensure the speaker is ON.
- Ensure Bluetooth device is ON.
- The volume of speaker is too low; adjust the volume to an appropriate level.
- Unable to connect with Bluetooth device, restart the pairing process.
- The speaker may be too far away from the Bluetooth device, move closer to it.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: Clean the speaker with a soft, lint free, dry cloth. Never use detergents or abrasive cleaners to clean.

Should you experiance any technical difficulties, in the first instance please call our customer support team on the following number:
U.K. - 01270 508538
IRE. - 1800 955 036
visit our webiste or email us at:
www.quesh.co.uk - enquiries@quesh.co.uk

INTENTIONALLY BLANK

INTENTIONALLY BLANK

MAXTEK

Warranty Card

Bluetooth Indoor/Outdoor Speaker 59033

Please keep your purchase receipt together with your warranty card

Name: _____

Address: _____

_____

_____

☎ _____

Date of purchase: _____

Location of purchase: _____

Detailed description of malfunctions:

SERVICE HELPLINE
Quesh Ltd, 1 Solway Court, Crewe Business Park, CW1 6LD
UK/N.Ireland 01270 508538, Rep. Ireland 1800 995 036
web: www.quesh.co.uk - email: enquiries@quesh.co.uk

AFTER SALES SUPPORT

☎ (GB) **01270 508538** (IRE) **1800 995 036**

www.quesh.co.uk

MODEL NUMBER: 59033

- Bluetooth Speaker
- Mains Adaptor
- Line-In Cable

3 YEARS WARRANTY